
ELECTRIC KETTLE

Instruction Manual

CEKS001

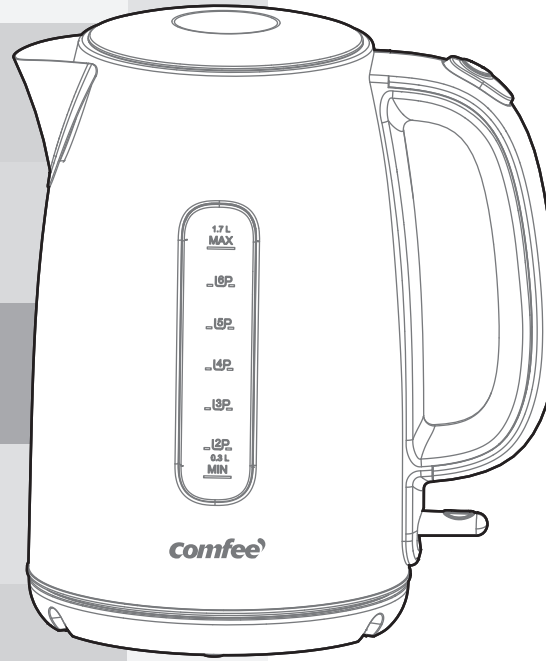

IMPORTANT NOTE: For your safety and continued enjoyment of this product, always read the instruction Manual carefully before using.

CONTENT

IMPORTANT SAFEGUARDS ---- 1
SPECIFICATIONS ---- 3
PRODUCT OVERVIEW ---- 4
OPERATION INSTRUCTIONS ---- 5
CLEANING AND MAINTENANCE ---- 6
SERVICE AND SUPPORT ---- 7

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read carefully and save all the instructions.

⚠ WARNING

- For additional protection, we recommend the use of a power outlet with a rated current of 10A. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- **DO NOT** fill kettle when positioned on base, Dry the water on the bottom of the body before place it onto power base.
- Never leave the appliance unattended when in use.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Electric kettle must be operated on a flat surface.Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances.
- **DO NOT** touch hot surfaces,use the handle.Be aware of steam being emitted from spout or lid especially during refilling.Do not remove lid during boiling cycle.
- **DO NOT** use the kettle to heat anything other than water. Do not fill above the "max" indication.Do not operate kettle if water is below minimum.
- **DO NOT** let the power cord hang over the edge of the table or touch hot surfaces.Always store excess portion of the power cord in the compartment of the base unit.
- **DO NOT** immerse any part of the appliance in water or other liquid.Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.Always use your appliance from a power outlet of the voltage(A.C. only)marked on the appliance.
- **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

- **NOTE:** If the kettle is overfilled,boiling water may be ejected. The kettle is only to be used with the stand provided.
- **WARNING:** Do not switch on if there is a possibility that the water in the heater is frozen.
- Always unplug from the plug socket when in following conditions: No water in kettle Filling water Not in use Before cleaning or moving kettle.
- Call our free customer assistance number for information or return to Midea Customer Sevice Department for examination and repair. Never repair the appliance by yourself.
- **WARNING:** To reduce the risk of fire or electric shock , do not remove the bottomcover of the body or the power base by yourself.
- **DO NOT** use a base unit other than the one supplied. The use of accessory attachments not recommended by the manufucturer may result in firei electrical shock or personal injury.
- **DO NOT** insert any object into slots or holes of the kettle.
- This appliance is for household use only. Do not use outdoors.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- **WARNING**:Do not remove the lid while the water is boiling.
- **CAUTION:**Position the lid so that steam is directed away from the handle.
- **CAUTION:**Insure that the appliance is switched off before removing it from its stand.
- **CAUTION:**Be careful and avoid water spillage on connector.
- Incorrectly use of appliance may cause serious burns, therefore, attention shall be taken.
- **DO NOT** try to access into kettle's container, heating element surface ins subjected to residual heat after use.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.

  a) A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

  b) Longer extension cords are available and may be used if care is exercised in their use.

  c) If a long extension cord is used:
  1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
  2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- To disconnect, turn any control to "off", then remove plug from wall outlet.

- Scalding may occur if the lid is removed during the brewing cycles.


SAVE THESE INSTRUCTIONS.

SPECIFICATIONS

Product Model	**CEKS001**
Power Supply	120V~ 60Hz
Rated Power	1500W

PRODUCT OVERVIEW

Names Of Main Parts

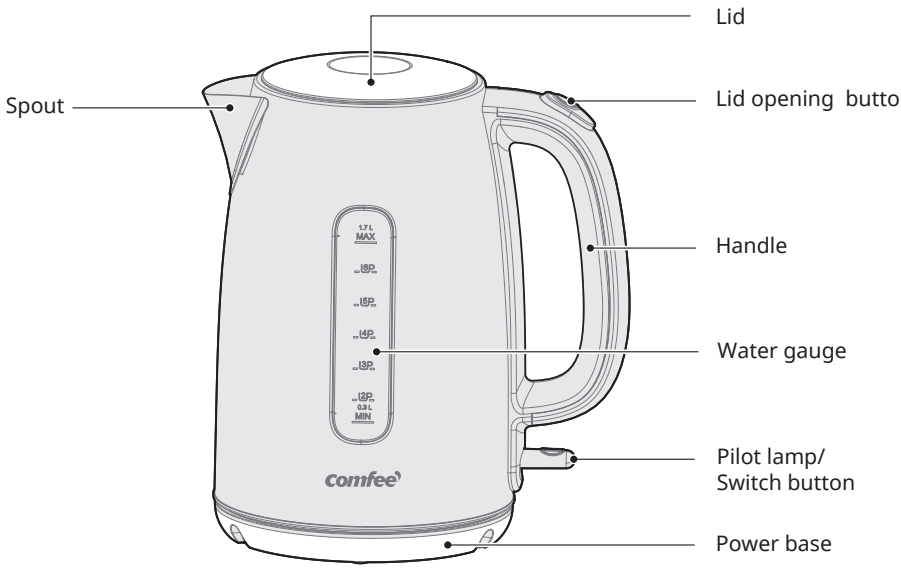

OPERATION INSTRUCTIONS

Brief Introduction

Rational design, bring convenience and enjoyment to your life.

1. Rapid boiling, save time and energy for you.

2. Steam control to switch the kettle off after boiling.

3. Automatically cut for boil-dry protection.

4. Thermostat of high quality.

5. 360° rotational power base.

6. Stainless steel body.

How To Use

For the first time to use or no use for a long time, it is recommended that you fill to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear kettle of any tiny particles. Do not drink such water.

1. Press the lid lock on the handle, and you can open it.

2. Remove the kettle from the base to the filling place. Fill the kettle with desired amount (no less than the minimum and no more than the maximum.) Put back the lid; place the kettle back on the base unit.

3. Connect the plug into a power outlet (120V,AC), switch the kettle on by pressing the switch. The light will illuminate to indicate the kettle is heating.

4. The kettle will automatically switch off once the water has boiled and the neon light goes off.

5. Lift the kettle from the base, and you can pour out the water into container.

Tips About Limescale

Limescale is a white deposit (often appearing as milky dots or chunks) formed by the crystallization of naturally occurring minerals in water, such as calcium and magnesium, during heating. It is directly related to water quality and is a natural physical phenomenon. It is commonly found at the bottom of electric kettle interiors and does not affect product use. Users are advised to clean it regularly every 1 to 3 months.
Descaling method (using citric acid for cleaning):
Users can regularly use citric acid, which can be purchased on e-commerce platforms, to remove the limescale. For usage instructions, please refer to the packaging instructions.

CLEANING AND MAINTENANCE

To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.
Always unplug from the plug socket and allow to cool down before cleaning.
Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

1. Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours.

2. Empty the solution from the kettle. Wipe off the deposits remained with damp cloth.

3. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use.

4. If necessary, repeat the operations above for several times.

5. Do not immerse nito water. The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.

6. Grasp the top of the scale filter and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.

7. Any other servicing should be performed by an authorized service representative.

SERVICE AND SUPPORT

1 YEAR LIMITED WARRANTY


This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.This warranty does not cover wear from normal use, and operation doesn't conformity with the instruction monuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchas er or gift recipient. Keep the original sales receipt, as proof of. purchase is required to make a warranty claim.This warranty is void if products is used for other than singlefamily household use or subject ed to any voltage and waveform other than as specified on the label.We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have othen legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty.

In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:
Customer Service Management Office:
Parsippany, NJ 07054
Toll Free: 1-866-646-4332
Amazon Store:
https://www.amazon.com/comfee
Tel: 866-646-4332
E-mail: officialservice@comfeeappliance.com

PRODUCT REGISTRATION CARD

STEP 1:

- Take photo of purchase receipt

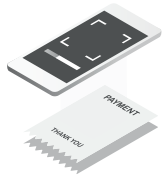

STEP 2:

- Text to (844)224-1614

or

- Email to register@registrationplace.com

or

- Registration on www.midea.com/us/support/Product-registration

US Canada

Notice: Product registration is not mandatory.

Failure to complete and return the card or form does not diminish the consumer's warranty rights

comfee

... is how i feel !