ELLERMONT®

"Talking to a golf ball won't do you any good, unless you do it while your opponent is teeing off" - Bruce Lansky



ABOUT ELLERMONT

Our mission is to develop and produce golf training solutions that help our customers improve their skills and enjoy the beautiful, infuriating, and incredible game that we love.

THANK YOU FOR YOUR PURCHASE

The journey to bring this product to life began years ago and we're so excited you've purchased an ELLERMONT driving net. Included in the box is a Golf Towel + Clip as a small gesture from us to let you know how much we appreciate your support, we hope you love it!

Will - ELLERMONT's Founder



customersupport@ellermont.com


VIDEO GUIDE

To help you through the setup process we've created a video guide. Scan the QR with your smartphone's camera to watch the customer setup video guide.

Video Sections:

- Frame + net setup (0:00 - 9:40)
- Putting on weather cover (9:40 - 12:13)
- Taking off weather cover (12:13 - 14:06)


FRAME OVERVIEW

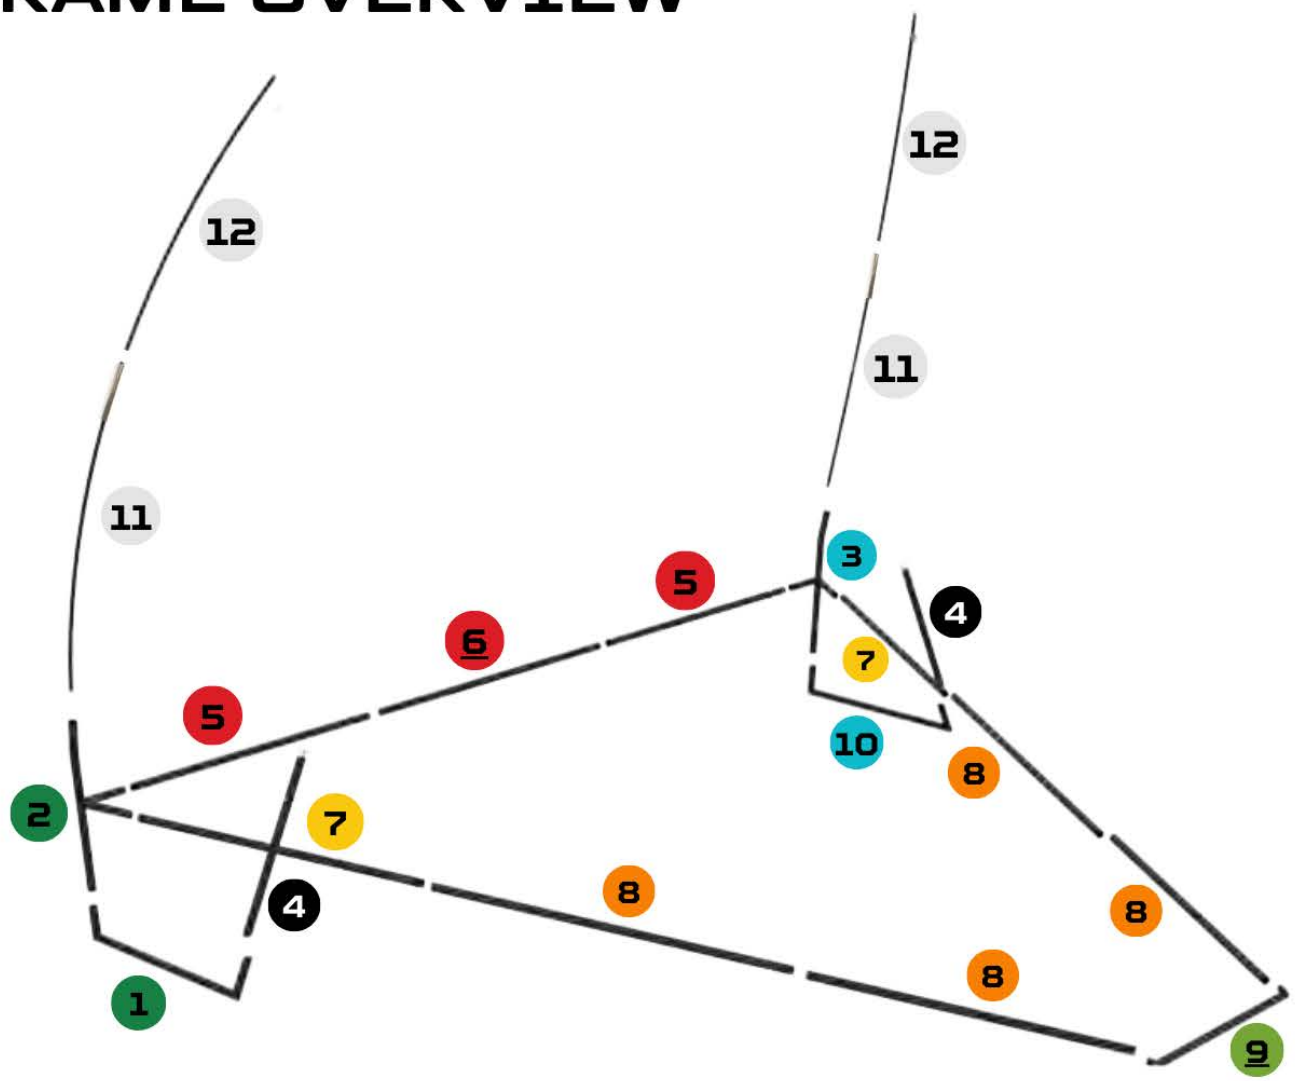

BUILDING THE FRAME SECTIONS


Step 1.0: Connect left leg

- *Twist caps off on Post 2*

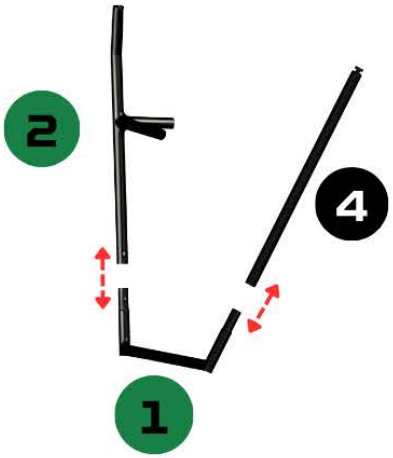

Step 1.1: Connect right leg


- *Twist caps off on Post 3*

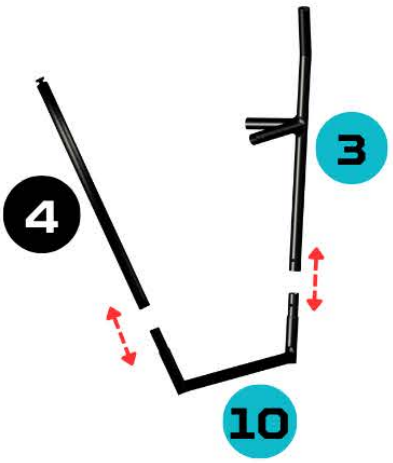


Step 1.2: Connect crossbar




Step 1.3: Connect return pole x2

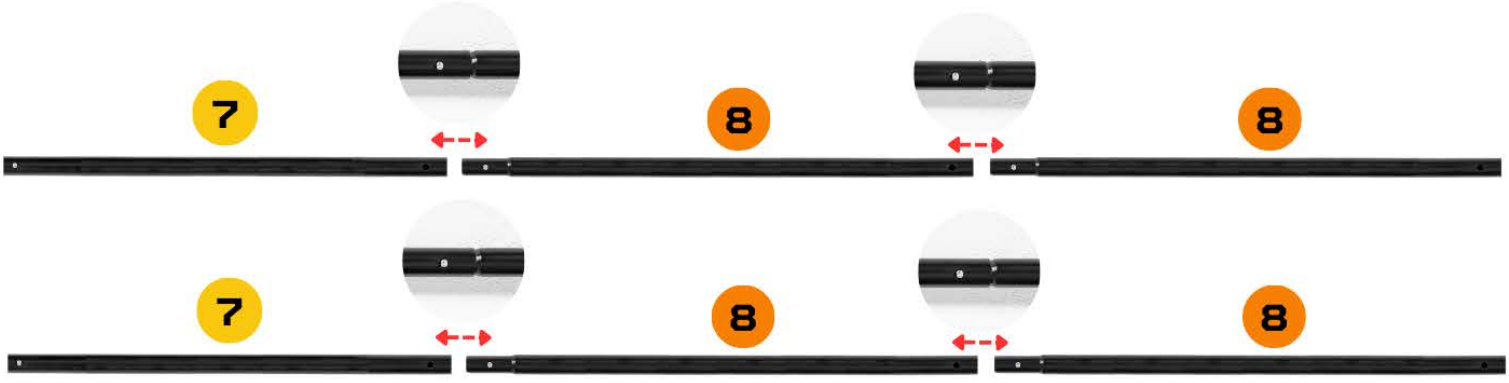

Step 1.4: Connect left leg to crossbar

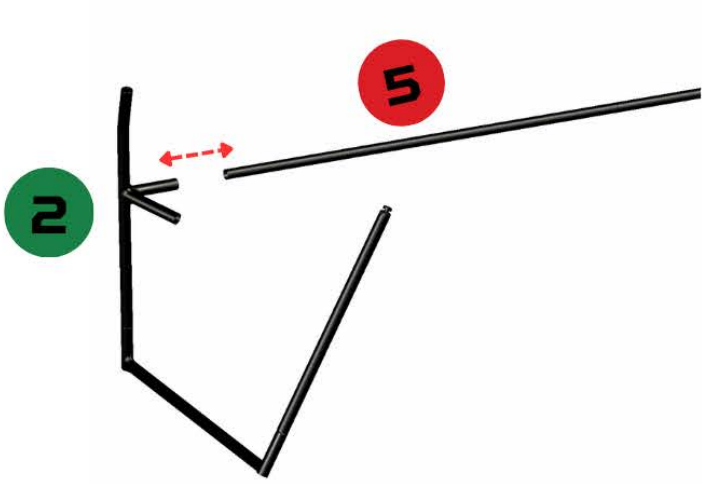

Step 1.5: Connect right leg to crossbar

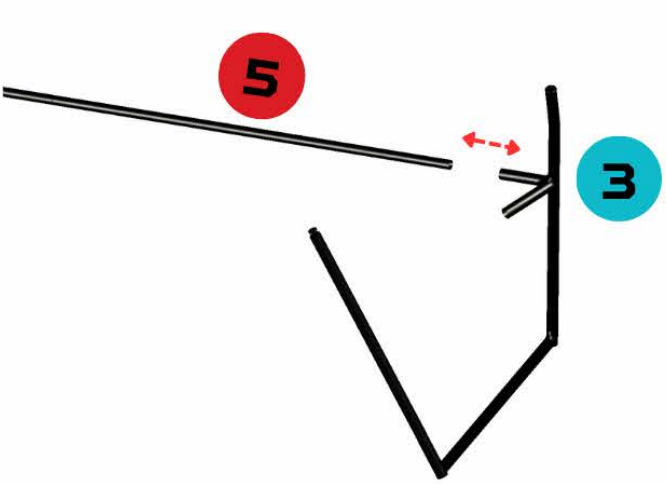


Step 1.6: Position net correctly

- ELLERMONT logo on rear banner should face up so that the receiver net is on top of the return net.

Step 1 .7: Insert the return poles (from Step 1.3) through the chute opening

- *Push all the way through until pole emerges at the end of the chute.*

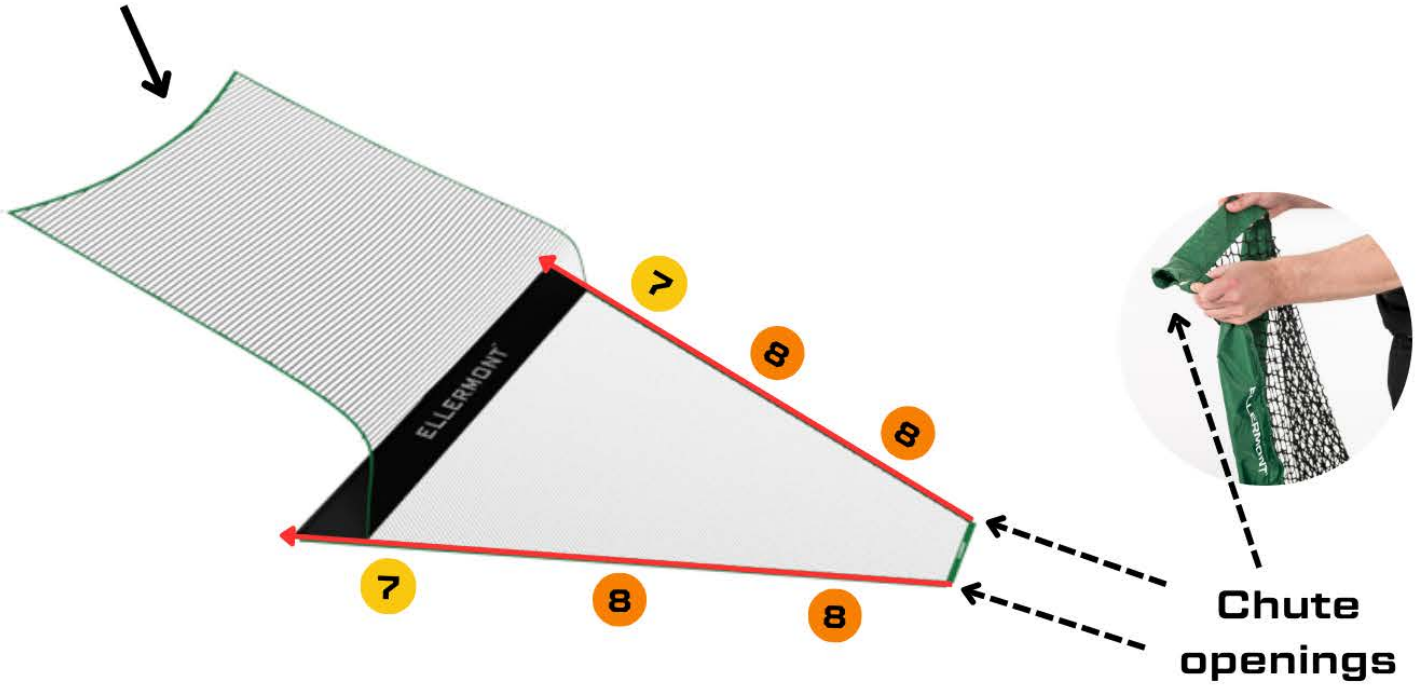

Step 1.8: Connect left return pole to frame



Step 1.9: Connect right return pole to frame



Step 2.0: Connecting return lip



1. Connect 9 to 8 on left side



2. Pull some material around



3. Connect 9 to 8 on right side



4. Move the material back

"I know I am getting better at golf because I am hitting fewer spectators" - Gerald R Ford

Step 2.1: Pull net up toward crossbar



Step 2.2: Detach velcro along the entire edge



Step 2.3: Loop velcro around and attach on underneath side (start from the middle and work out to each edge)

***Tip:* Loose pocket in your return net?**

- There is excess velcro on underside so you can pull sections tighter to fix.



Step 2.4: Attach return lip velcro around Post 9



1.



2.



3.

***Tip:* Ball returning too fast?**

- To create more slack in return net loosen the rear loop velcro by only attaching it to the initial edge of the underside velcro.
- Next, loosen the return lip velcro by attaching it to the initial edge of the underside velcro.
- *For the loosest possible return net, disconnect velcro on sides (only leaving the centre attached, along the logo)*



Step 2.5: Insert fiberglass rods into rear legs






Step 2.6: Connect top corner loops to slot on top of Post 12


Step 2.7: Connect lower loops to slot on top of Post 4

Step 2.8: Set up your hitting mat, then align hitting mat with edge and you're ready to go!



Mat Tee: Insert tee on underneath side

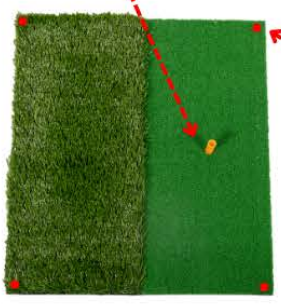

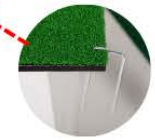

Metal Pegs: Insert four metal pegs, one in each corner (the extra four pegs are for the frame)



Tip: Make holes easier to see on top side

- *Turn mat upside down, find the hole, push peg through to expose it, then pull it out and insert peg on top side.*

"It's good sportsmanship to not pick up lost golf balls while they are still rolling" - Mark Twain

APPLYING THE WEATHER COVER

Step 2.9: Unhook net, put Posts 11 + 12 in the smaller Weather Cover bag



Step 3.0: Lay receiver net over return net (distributing the weight)



Step 3.1: Position Weather Cover

- The ELLERMONT logo marks the top side of Weather Cover. The logo should be facing up, and the two securing straps should be underneath before moving to the next step



Step 3.2: Align it with the return net then fold the rear over (we are looking for the two securing straps)



Step 3.3: Pick up both securing straps in one hand



Step 3.4: Lift the net lip up and slide both straps underneath



Step 3.5: Pull material up the return net and fit the front pocket over the return lip



Step 3.6: Pull material up and connect corner velcro



1. Pull over corner



2. Wrap + stick velcro down



Step 3.7: Connect centre velcro strip to excess velcro on net's underside



TAKING THE WEATHER COVER OFF



1.Take Posts 11+12 out of bag and insert into frame



2. Detach rear velcro and take Weather Cover off






3. Roll up Weather Cover (long and thin) and insert into the bag



4. Repeat Steps 2.6 - 2.9 (reattaching the net's loops and aligning the hitting mat)

DO NOT SET UP NET WHERE FRAGILE OR VALUABLE ITEMS ARE BEHIND IT

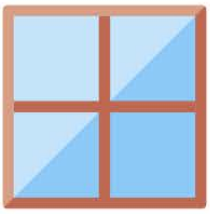
Windows


Vehicles


Valuables


Electronics


Art


Miscellaneous Valuable

DO NOT WALK BEHIND NET OR STAND BESIDE NET WHILE IN USE

No one should be standing behind the net whilst in use. User must be mindful of others when practicing, checking that no one is behind the net before hitting the ball. User should also ensure no one is to the left or right of the net (in the event of a shank or mishit), as the ball can miss the net entirely and endanger a bystander.


DON'T WALK BEHIND OR STAND BEHIND NET WHILE IN USE


DON'T STAND TO THE SIDE OF THE NET WHILE IN USE

HOW TO POSITION YOUR NET

The safest position for your net is with something solid like a wall or fence behind it, but be sure to leave a sufficient gap behind the receiver net, as the net will move backwards when absorbing force of the ball. If the solid surface is too close the ball can ricochet or bounce off and damage valuables or endanger users or bystanders.



ROUTINELY CHECK YOUR RECEIVER NET

It is important to perform routine inspections of your net (particularly in the centre of the receiver net) for signs of wear and tear.



WARNING - PET'S CLAWS CAN DAMAGE THE PRODUCT

Be mindful that our beloved pets can have sharp claws which can tear into the Weather Cover and/or the net itself.



SUPERVISE CHILDREN WHEN USING PRODUCT

The net is suitable for all ages, however we suggest supervising children when using any golf training equipment product.



WARNING - SECURING STRAPS COULD BE HARMFUL TO SMALL CHILDREN OR PETS

The under side of the Weather Cover has securing straps which could potentially be harmful to small children or pets if they became entangled in them.



CHOKING HAZARD - CHILDREN & PETS

Elements which may require assembly can cause choking hazards and should not be ingested by either animal or human. Be mindful of pets and children trying to chew or put any part of the product near their mouth.

DO NOT ALTER THE PRODUCT

ELLERMONT's warranty is not valid for products which have been altered or modified in anyway.

DO NOT USE IT FOR OTHER PURPOSES

It is important not to use the net for purposes other than which it was expressly designed for. Throwing large, heavy objects can strain the loops connected to frame parts 4 and 12.

HOW TO CARE FOR YOUR NET

1. CHECK YOUR GOLF BALLS! DO NOT USE IF SCUFFED OR DAMAGED

The biggest reason golf nets get damaged and break is actually from using scuffed golf balls. As the golf balls wear, they develop sharp edges which cut into the net with each shot. Use newer balls with no signs of scuffing (check by feeling for abrasive edges).

Note: If you are using your net indoors or near hard surfaces, be mindful that concrete and asphalt will damage golf balls, leading to abrasive edges that will cut the net.



Scuffed golf ball



Scratched or cut golf ball

2. BE MINDFUL OF THE ELEMENTS (RAIN / UV EXPOSURE)

Constant exposure to rain and UV sunlight will degrade most materials, including those in golf nets. Your WEATHER COVER is your best friend when it comes to protecting your net when it's not in use and preserving its longevity.





Warning: We suggest packing net up when there is extreme weather or when you are going away. Weather Cover is designed to protect net against everyday UV conditions and make your net last longer.

HOW TO CARE FOR YOUR NET

DO NOT DRAG YOUR NET ON GRAVEL, CONCRETE, WOOD, ASPHALT OR ANY OTHER ROUGH / ABRASIVE SURFACE

Dragging your net along rough surfaces will damage both the black internal netting and the green exterior.



PRACTICE WITH ALL CLUBS (MIX IT UP!)

The net is built for all types of golf shots from the face of all types of golf clubs, from drivers to irons. It is designed to receive and return shots from high club speed drives, but all nets will obviously wear out faster if this is every shot.
Part of aiding the net's longevity is mixing up these harder, faster drives with iron shots as well.



REATTACH VELCRO WHEN PACKING UP NET

It's important to reattach the velcro on the rear loop, and on the front lip when packing up your net. Velcro has tiny hooks and these can damage the black interior netting if they are loose and hook onto it the net accidentally.



Reattach rear loop velcro



Reattach return lip velcro

I HAVE AN ISSUE... WHAT DO I DO?

In the event of any issue, please contact us and we will provide support!

As a manufacturer of some of the world's most advanced golf training equipment and solutions, ELLERMONT is committed to the performance and durability of our products. This warranty agreement outlines the terms and conditions of the limited warranty for your ELLERMONT Driving Net.

With respect to golf driving nets, ELLERMONT warrants, to the original consumer ("Consumer") only, that its golf net will be free from material defects in material and workmanship, in the course of the products normal and customary use, for one (1) year from the date of shipment or in-person purchase, whichever comes first. If the product proves to be defective during this warranty period, ELLERMONT, at its option, will:

1) replace the defective element of golf net with a replacement component; or,
2) refund the amount paid if no appropriate replacement component unit is available.

Any replacement product will be warranted from the date of purchase of the original product, not from the replacement date.

Under this warranty, the Consumer must notify ELLERMONT or its authorized representative of the defect before expiration of the warranty period. ELLERMONT MAY REQUIRE THAT THE DEFECTIVE PRODUCT BE RETURNED TO ELLERMONT OR AUTHORIZED REPRESENTATIVE OF ELLERMONT FROM WHICH THE PRODUCT WAS ORIGINALLY PURCHASED. Upon return of the product or claim under this warranty, the Consumer shall provide the following:

(1) proof of purchase in the form their order details;
(2) proof that the golf net has not been abused, altered, defaced, or misused, or otherwise damaged through the act or neglect of the Consumer or a third party; and,
(3) proof that the Consumer has used the golf net in the manner they have been instructed to do so, including the use of the Weather Cover to protect against UV degradation.

These warranties shall not apply to normal wear and tear of the product, any defect, failure and/or damage caused by improper use or improper and inadequate maintenance and care, including but not limited to, damage caused by damaged golf balls with rough edges which can fray and cut into netting; failing to adhere to the setup instructions resulting in damage to the product; any attempt to modify, adjust or repair the ELLERMONT driving net; and, exposure to weather conditions including UV, wind, snow, falling objects such as branches, hail, lightning or rainfall etc.

It is the responsibility of the Consumer to routinely inspect their net prior to each use. When using the ELLERMONT driving net the user must ensure that no one is standing behind the net in the event of product failure, which could result in injury. This limited warranty does not cover any personal damage, injury or medical expense resulting from failing to follow this instruction. This limited warranty does not cover ANY damage to additional items, such as broken windows, interior damage e.g. walls, electronics such as TVs/Monitors, works of art, personal valuables, vehicles, any other miscellaneous items, or any other damage from a ball going through a net.

THE ABOVE WARRANTIES ARE GIVEN BY ELLERMONT WITH RESPECT TO THIS PRODUCT AND ITS RELATED ITEMS IN LEIU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. ELLERMONT AND ITS REPRESENTATIVES, VENDORS, AND ASSOCIATES, DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION. ELLERMONT'S RESPONSIBILITY TO REPAIR, REPLACE, OR OFFER A REFUND FOR DEFECTIVE PRODUCTS AND RELATED ITEMS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CONSUMER FOR BREACH OF THESE WARRANTIES.

All warranties implied by state law, including implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. With the exception of any warranties implied by state law as hereby limited, the foregoing limited warranties are exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of the manufacturer or seller.

TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT SHALL ELLERMONT AND ITS REPRESENTATIVES, VENDORS, AND ASSOCIATES, BE LIABLE FOR ANY INDIRECT, DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOSS OF PROFITS) WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND IRRESPECTIVE OF WHETHER ELLERMONT OR ITS REPRESENTATIVES, VENDORS, AND ASSOCIATES HAS ADVANCED NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

No person, agent, distributor, dealer or other third party is authorized to change, modify, or extend the terms of these warranties in any manner whatsoever. These warranties give you specific legal rights. You may also have other rights that vary from state to state.

If you have any questions or wish to make a warranty claim please contact us at (customersupport@ellermont.com). Once our ELLERMONT customer support team determines that the circumstances warrant a claim in the form of a replacement product we will send a replacement component or process refund if the inventory is not available. ELLERMONT will pay for the shipping of the replacement component.



NEED SUPPORT? IF YOU HAVE ANY QUESTIONS OR CONCERNS LET US KNOW!

RECYCLING INSTRUCTIONS FOR YOUR POLY BAGS (NEXTREX)

Your product will come with protective poly bags. These can be recycled through programs such as NexTrex, which will take plastic (that would have otherwise been discarded into landfill) and recycle it into useful items such as outdoor decking. NexTrex's list of USA drop off locations by state can be found on their website.

PACKING LIST

PACKING LIST (FRAME)	
Part Number	**Quantity**
1	1
2	1
3	1
4	2
5	2
6	1
7	2
8	4
9	1
10	1
11	2
12	2

PACKING LIST (REST OF SET)	
Item	**Quantity**
Frame	1
Net	1
Weather Cover	1
Carry Bag	1
Weather Cover Bag	1
Hitting Mat	1
Tee	1
Metal Pegs	8
Gift Towel With Clip	1
Insert Instructions Booklet	1

PATENT INFORMATION

Utility Patent: This product is covered by U.S. Patent No. #11,596,847
Design Patent: Patent pending (US patent application no. 29/849,859)