
FOHERE

USER MANUAL

POPCORN MAKER
Model:RH-906

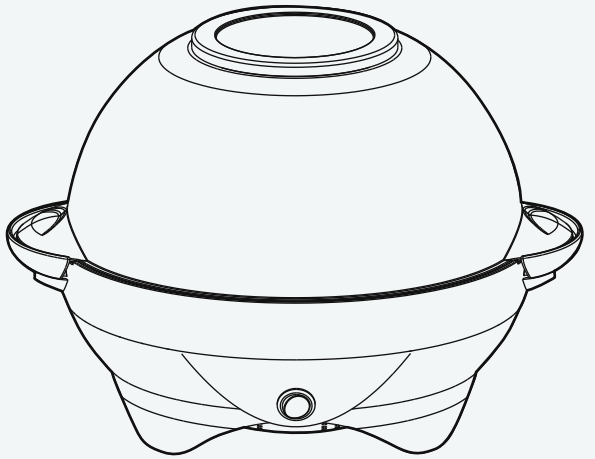

Before operating the appliance, please read this manual and all the safety instructions thoroughly and retain it for future reference.

HOUSEHOLD USE ONLY

Manufacturer/Hersteller: Shenzhen Foduosi Trading Co., Ltd.
Address/Adresse:1403, Block 4, Haixuan Plaza, No.89 Jinlong Road, Luogang Community, Buji Street, Longgang District, Shenzhen
Facebook Page: http://www.facebook.com/foherehome
Email: service@fohere.com
Web: www.fohere.com
MADE IN CHINA

c ETL LISTED us
Intertek

TABLE OF CONTENTS

Important Safeguards	02
Know Your Popcorn Maker	05
Using Popcorn Maker	06
Care And Cleaning	09
Operation Guidance	11
Troubleshooting	12

IMPORTANT SAFEGUARDS


When using your Popcorn Maker, basic precautions should always be followed, including the following:

- **NOTE:** Always ensure that the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, Please do not detach and repair this product by yourself, please contact our customer service .
- This product is intended for household use only. Industrial or commercial use will void the warranty. And the supplier assumes no responsibility for failures caused by using the popcorn maker for any other purpose than intended.
- **IMPORTANT: In case of technical problems, switch off the machine and do not attempt to repair it yourself. Please contact our customer service** .
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The manufacturer assumes no responsibility for any damage caused by incorrect use of the appliance, or by repairs carried out by unauthorized personnel.
- This appliance is not suitable for people (including children) who have physical, sensory, or mental deficiencies, or lack experience and knowledge in using this product unless they are supervised by a person responsible for their safety or receive instructions on using this product.
- **Do not** use the appliance if it has been dropped or damaged in any way.
- To reduce the risk of electric shock, **Do not** immerse or expose the motor assembly, plug or cord in water or any other liquid.
- **WARNING: Never immerse the unit in water or any other liquid for cleaning purposes.**
- Remove the plug from the socket by gripping the plug. **Do not** pull on the cord to disconnect the appliance. Always unplug the unit when not in use and before cleaning and disassembling.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- **Do not** let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- **Do not** allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point **Do not** place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. **Do not** use this appliance for anything other than its intended use.
- **Do not** carry the appliance by the power cord.
- Never use this unit near bathtubs, showers, basins or other vessels containing water.
- **Do not** leave this appliance unattended during use. Always unplug the unit when not in use. Allow it to cool down before assembly, disassembly, and cleaning the appliance.
- Always operate the appliance on a smooth, even and stable surface. **Do not** place the unit on a hot surface.
- **WARNING: Do not touch hot surfaces. Use handles, always wear oven mitts or use potholders.**
- After pressing the switch, this popcorn maker heats immediately. To avoid overheating, add corn kernels before turning.
- **WARNING: After popping, the base is HOT! Grasp handle only. Use caution to avoid bums.**
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Extreme caution must be used when removing popped popcorn.

Always flip the unit away from you and over a countertop.

- **CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or another injury to persons or damage to property.**
- **CAUTION: This popcorn maker is hot during operation and retains heat for some time after turning O. Always use oven mitts when handling hot base and allow to cool before cleaning. Do not place anything on top of the appliance when it is operating or hot.**
- **WARNING: This popcorn maker will NOT shut off automatically. To turn the popcorn maker off, press the “O/I" switch to O. Then remove the plug from outlet.**
- Allow unit to cool completely before popping a second batch.
- Never put the popcorn maker's clear lid, black lid cap, or rotating rod in a microwave oven.

KNOW YOUR POPCORN MAKER

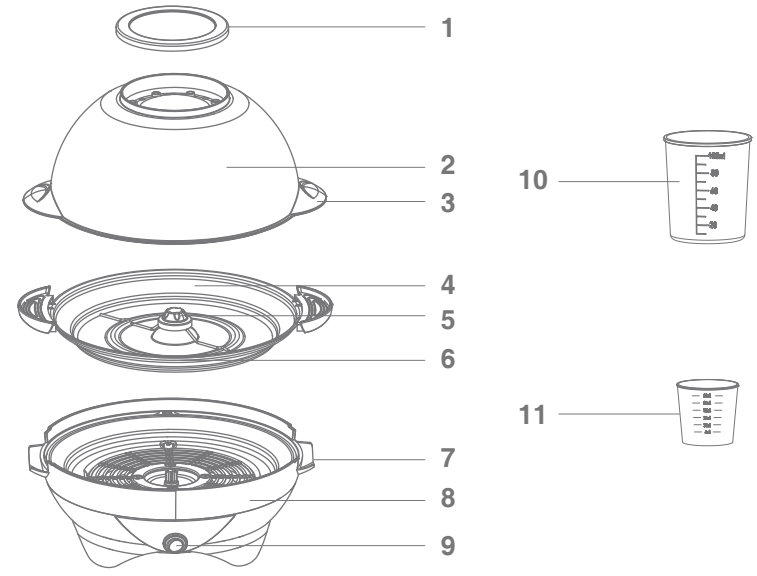

1. Black lid cap
2. Clear lid
3. Lid handles
4. Popping plate
5. Center knob
6. Rotating rod
7. Base handles
8. Popcorn maker base
9. O/I switch
10. Corn kernel measuring cup
11. Oil/Butter measuring cup

Specifictions

Voltage	120V/60Hz
Wattage	800W

USING POPCORN MAKER

Before first use

1. Unpack the box, please check that your popcorn maker is in good condition, make sure no damage to the cord/plug, Then make sure that all the accessories are included. Please contact the service department if some accessories are missed.

2. You must confirm that the voltage indicated on the popcorn maker corresponds with the voltage in your home.

3. Please ensure the machine is level and on a stable/heat-resistant table or platform to avoid malfunction.
Note: When the machine is working, The popcorn maker base will emit heat. Make sure your table or platform can withstand the heat or use other things to protect your table or platform.

4. Gently press the lid handles at both with your hands to make sure that each side of the popping plate is completely fixed to the popcorn maker base.
NOTE: Make sure the popping plate is correctly installed on the popcorn maker base. If it is installed incorrectly, the machine will not work.
TIPS: You can try to rotate the center knob so that the popping plate is installed correctly.


5. The popcorn maker is now ready for use.
NOTE: When you use the popcorn maker for the first time, it may emit a slight smoke or smell. This is normal and should disappear after 1 or 2 uses. You can rest assured that this will not affect the quality of the machine.

6. Various quantities of popcorn can be made with this popcorn maker. Refer to the chart below and determine what volume of popcorn you want.
CAUTION: Do not use more than the maximum recommended amounts of corn and oil. Not strictly following the manufacturer's recommendations may damage the popcorn maker or cause other dangers.

Volume of Popcorn	Popping Corn	Oil Dosage	Butter Dosage(Optional)
4.5-5Quarts	120g/mll	2.5ml-30ml	22.5g/ml
5-5.5Quarts	180g/ml	37.5ml-45ml	37.5g/ml


To use your popcorn maker

1. Align the popping plate of the popcorn machine with the base, then install the two accessories well.

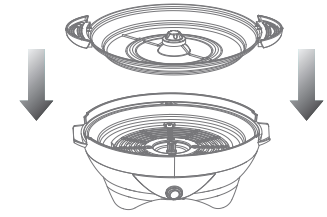

2. Add the approximate (recommend 30ml) amount of vegetable oil or butter to the popping plate, And evenly distribute 120 grams of corn kernels to the popping plate.

IMPORTANT: Do not exceed 180 grams of corn kernels in a single run.

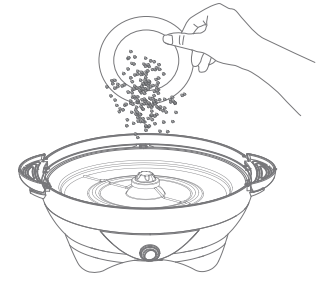

3. Put on the clear lid, then press the "I" switch, the rotating rod will begin to spin, the cooking process will begin.




IMPORTANT

1.Remove the black lid and do not open the clear lid while the machine is working.


2.Do not leave unattended during use, and keep your face and hands away from the machine.

4. Please turn off the power immediately after popping and then cover the black lid cap.

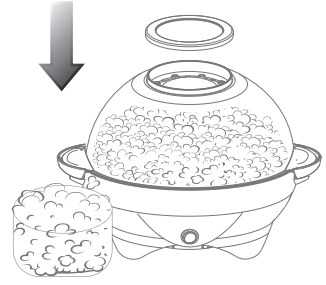

IMPORTANT: Please turn off the machine as soon as the popping sound stops to prevent the popcorn from burning.

5. Hold the removable popping plate and rotate 180 degrees, no need to flip the entire machine. Then you can enjoy the fresh-popped popcorn.

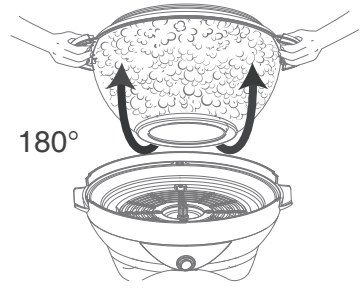

IMPORTANT:


1. Please turn off the machine as soon as the popping sound stops, and rotate the popping plate 180° immediately. Because the temperature of the heating plate is too high,the popcorn will be burnt.

2. Snap the black lid cap securely onto the transparent popcorn machine's bowl to prevent oil leakage.

3. Wait for the machine to cool down completely before making the next batch of popcorn.


CARE AND CLEANING

1. Unplug the popcorn machine and allow it to cool before cleaning.

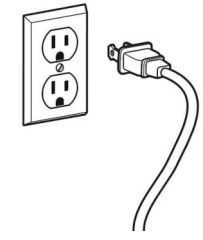

NOTE: The popcorn machine should be cleaned after every use.

2. Wash the black lid cap, clear lid and popping plate in warm, soapy water. Use a soft cloth or kitchen sponge, rinse and dry thoroughly.

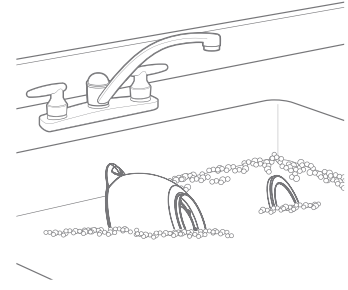


WARNING:


1. **To prevent scratching, never use abrasive scouring pads, steel wool, or scouring powders.**
2. **After consistent use, the non-stick finish may discolor. To remove discoloration, use a soft cloth saturated with lemon juice or vinegar and apply to the finish.**
3. **Never put popping plate in the dishwasher.**

3. Wipe the unit with a damp cloth or sponge.

WARNING: Never immerse the popcorn maker base, cord or plug in water or other liquid.

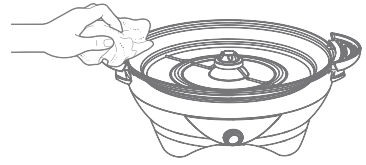

4. After cleaning and drying, the machine is assembled and placed in a safe and dry place.

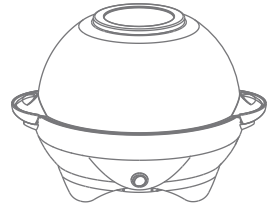

OPERATION GUIDANCE

Recipe Name	Traditional Popcorn	Olive Oil Popcorn	Parmesan Popcorn
Taste	The perfect balance between butter and salt. For those who are salt sensitive adjust the amount of salt by personal taste.	Use olive oil as a healthier alternative to butter, it gives the popcorn that delicious olive oil flavor.	Parmesan gives this popcorn a great cheesy and tangy flavor.
Formula	15ml vegetable oil 120g corn kernels 2.5ml-4ml kosher salt 45ml unsalted butter	15ml vegetable or colza oil 120g corn kernels 2.5ml-4ml kosher salt 30ml-45ml extra virgin olive oil	15ml vegetable or colza oil 120g corn kernels 45ml extra virgin olive oil 7.5ml grated Parmesan pinch kosher salt
Steps	1. Evenly distribute the vegetable oil, kosher salt, and unsalted butter on the popping plate of the popcorn maker. Add the corn kernels. Turn the power switch to “I”. 2. When the corn kernels have finished popping, turn the power switch to "O". Put the black lid cap on the clear lid, and flips the popping plate vertically 180 degrees immediately onto a flat surface.	1. Evenly distribute the vegetable oil, olive oil, salt on the popping plate of the popcorn maker. Add the corn kernels. Turn the power switch to “I”. 2. When the corn kernels have finished popping, turn the power switch to "O". Put the black lid cap on the clear lid, and flips the popping plate vertically 180 degrees immediately onto a flat surface.	1. Evenly distribute the vegetable oil, olive oil, and Parmesan salt on the popping plate of the popcorn maker. Add the corn kernels. Turn the power switch to “I”. 2. When the corn kernels have finished popping, turn the power switch to "O". Put the black lid cap on the clear lid, and flips the popping plate vertically 180 degrees immediately onto a flat surface.

TROUBLESHOOTING

Problem	Analysis of Causes	Troubleshooting
Machine not working	1. The plug for poor contact; 2. The voltage is too low.	1. Check whether the plug is loose, check whether the socket is suitable, or check whether the socket is faulty; 2. Contact customer service
The popcorn is burnt	1. The machine was not shut down in time after the popcorn was finished. 2. After popping, it was not flipped in time.	1. Turn off the machine in time after popping; 2. Flips the popping plate vertically 180 degrees immediately after popping.
The black lid cap is deformed	N/A	Do not put the black lid cap on the clear lid when the machine is working.
The clear lid is missing/damage	N/A	Contact customer service
Popping plate coating peeling off	Improper cleaning operation causes the coating to be scratched and peeled off.	1. It is recommended to use a soft sponge or cloth to clean the popping plate; (refer to the cleaning module of 10 page for details.) 2. Contact customer service