Instructions


1.Install the cabana

A) Use the sand shovel to dig a hole in the sand and insert the lower pole to the hole. Cover it tightly with sand.

B)Turn the cabana upside down and push the runner down until the top spring locks.

C) Install the cabana rod on the bottom pole while sliding it into the bottom pole.Turn the knob tight.

D) Fill the four sand bags with sand.The more sand the better.

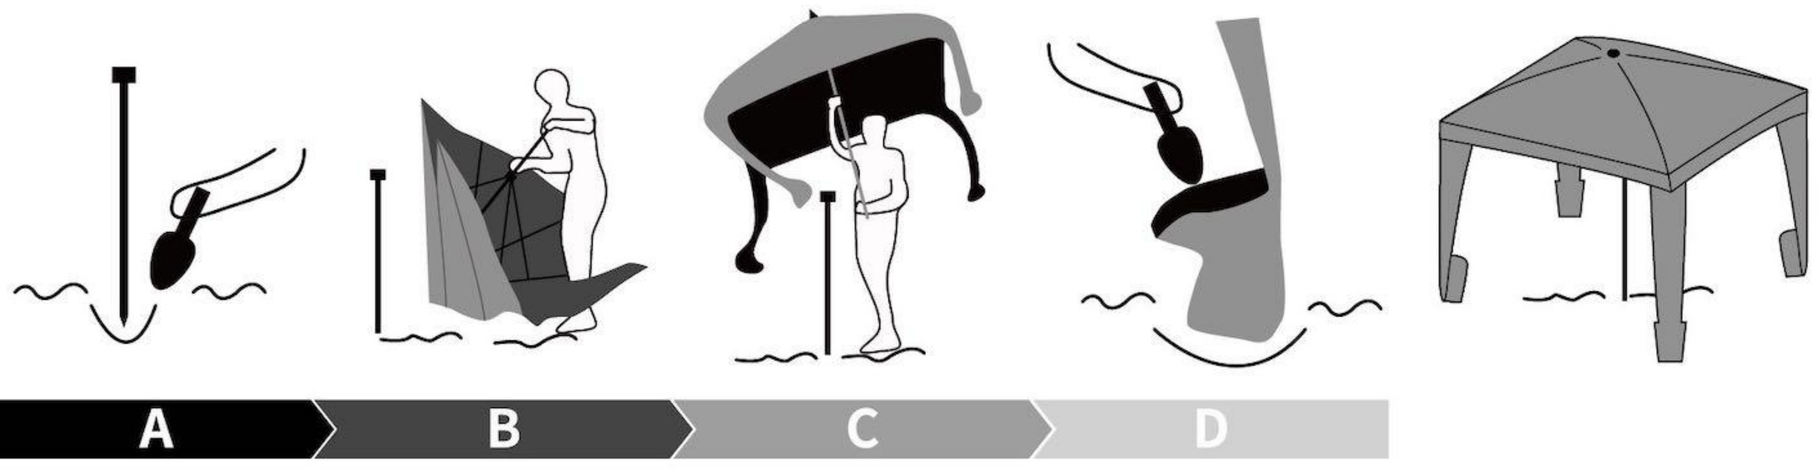

2.Cloth wall for extra shade.


The included cloth wall can be used for extra shade.

It hooks onto the cabana rods.

The cloth wall has sand pockets at the bottom to keep the wall stable.

Fill the sand pockets with as much sand as possible.

Digging holes for the sand bags and making sure all of the bags are resting in the holes to increase the stability.

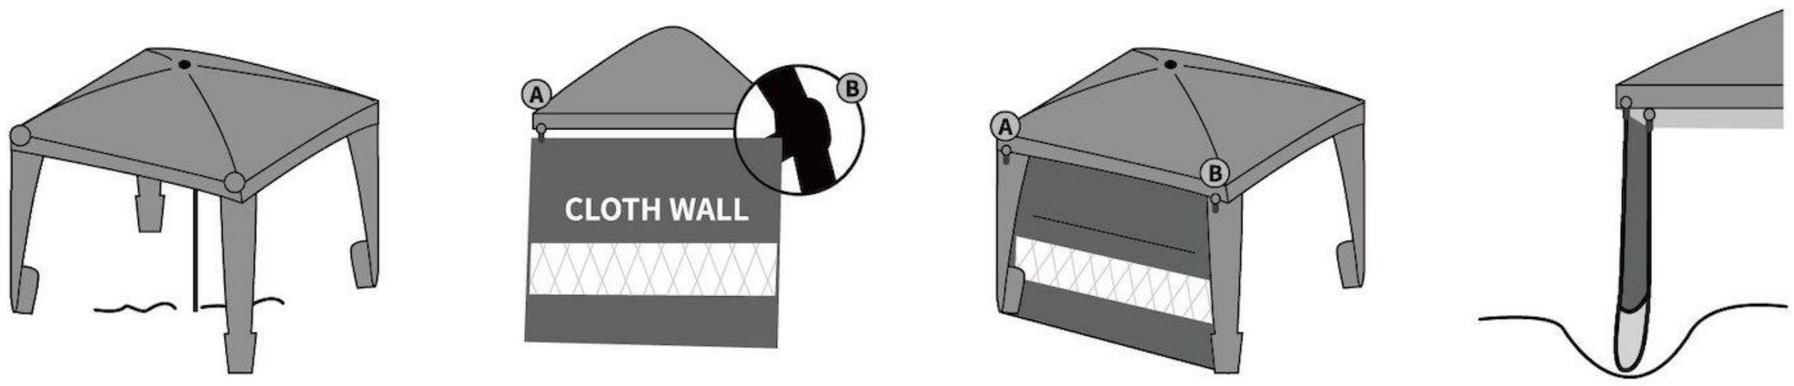


3.Remove the cloth wall first and pour out the sand and fold it well.

Pour out the sand of the four sand pockets and take down the upper part of cabana.

Push the button on the runner and close it.

Slide the folded cabana into the carrying bag with the cloth wall. Place the lower pole in the carrying bag together with the sand shovel.

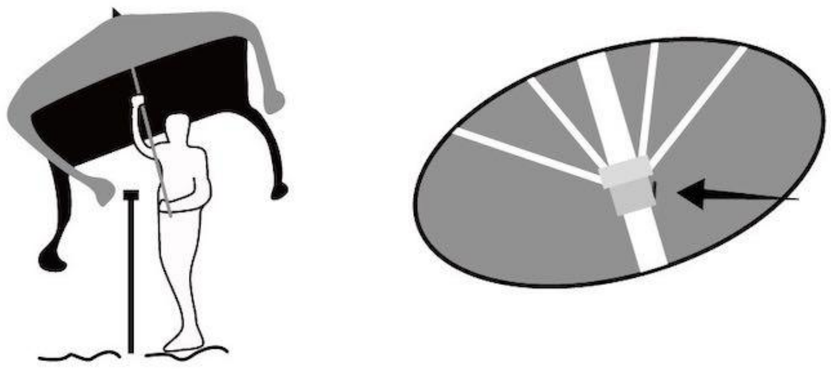

www.ammsun.com
support@ammsun.com